

ADJ201 Smart Pump and REM5000ES Remote Control Station 8 Pumps Operations Manual

Caution:

**Read rules for safe operation and instructions
carefully.**

© Copyright 1997 REV 07/2010

XITECH
Instruments, Inc.

06 Camino De Los Desmontes, Placitas, New Mexico 87043

Phone: 505-867-0008 Fax: 505-867-0212

Web site: www.xitechinc.com

E-mail: xitechinc@xitechinc.com

3 YEAR WARRANTY

This product is warranted to the original purchaser to be free from defective materials and workmanship. Under this warranty the product will be repaired or replaced at our option, without charge for parts or labor.

This warranty does not apply to the air logic valve or battery.

The period of this warranty covers 3 years on parts and labor from date of original purchase.

This warranty entitles the original purchaser to have the warranted parts and labor rendered at no cost for the period of the warranty described above when the instrument is carried or shipped, pre-paid, to our factory, together with proof of purchase.

RULES FOR SAFE OPERATION

- 1. Please review carefully and abide by the maximum limits placed on each type of equipment.**
- 2. Please follow standard electrical practices and safety precautions when installing DC power to our products.**
- 3. Do not operate this equipment in a CLASS 1 explosive area.**

DNAPL Recovery System Installation

The system (Figure 1) relates to sinking DNAPL recovery in wells two inches in diameter and larger. This system includes: an intrinsically safe pneumatic ADJ201 Smart Pump (Figure 3) which removes the DNAPL down to 200 feet deep; and a solar powered Control Station Model REM5000ES which operates up to 8 pumps intermittently, records run time, and has a high level tank shutoff assembly.

STEP 1. Place the REM5000ES near the well and have the front of the box facing due SOUTH (Figure 2). Reposition the solar panel to its upright position by unbolting the two side hinge arms at each end of the solar panel and reattaching these arms to the top of the box. Place the REM5000ES as close to the well as possible. Place the holding tank within 20 feet of control box. **CAUTION:** The controller inside the control box is NOT intrinsically safe. Do not operate the REM5000ES in a CLASS I area.

REM5000ES also has an external solar panel that comes with a ground mount (Figure 2). The external solar panel needs to be mounted to the ground. The ground mount needs to be anchored to the ground via concrete blocks, if in dirt, or lag bolts, in pavement.

Connect external solar panel to right end of control box.

STEP 2. Install holding tank shutoff assembly into holding tank (a 2" standard pipe inlet will be required in the holding tank). The level of product in the holding tank can be set by raising or lowering the liquid level float switch rod. Plug the high level shutoff switch cable connector into the left end of the controller (Figure 1).

STEP 3. Turn on the controller power switch. If the red "Product Tank Full" light stays on, you have a problem with tank shutoff wiring. Turn off the power switch and re-check the tank shutoff wiring. If the light continues to stay on, call the factory.

ADJ201 Smart Pump and REM5000ES Remote Control Station with Tank Shutoff

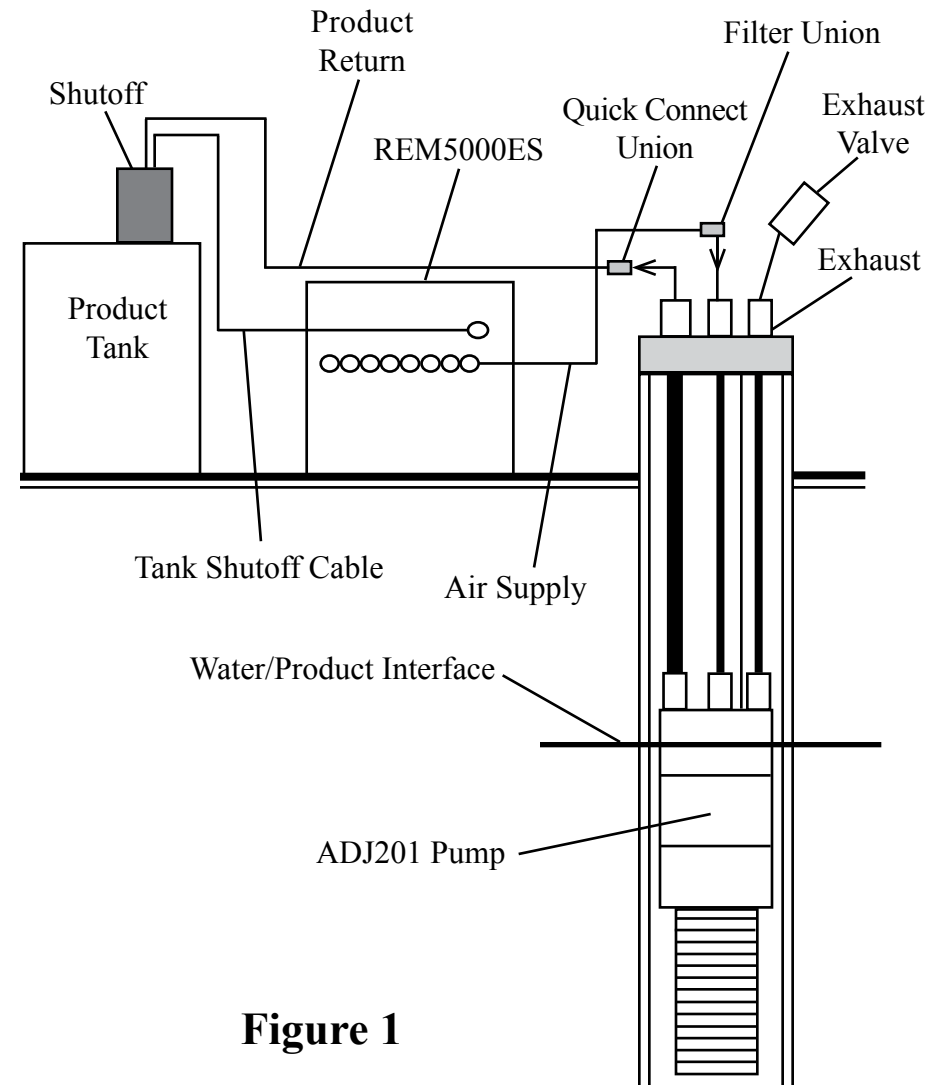


Figure 1

STEP 4. Install horizontal air supply lines to each well. Use 3/8" OD tubing for horizontal runs. **CAUTION:** Please keep dirt from getting into these lines! Attach a filter union onto the end of this line at the well vault.

STEP 5. Install horizontal product return lines to each well. For INDIVIDUAL product return lines use 1/2" OD tubing for horizontal runs. For a COMMON product return line, use 3/4" OD hose for all horizontal runs. Attach a quick connect union onto the end of this line at the well vault.

STEP 6. Position the pump and well cap on the ground near the well. Cut a length of 1/4" OD air supply tubing to cover the distance from the top of the well down to the bottom of the well, plus 5 feet. **NOTE:** If the pump is over 70 feet deep, use 3/8" OD air supply tubing in stead of 1/4" OD tubing. Slide enough tubing through the well cap to position the pump at the bottom of the well and attach the end of the tubing to the top of the pump tube fitting labeled "G" (Figure 3).

STEP 7. Cut a length of 5/16" OD product tubing same length as the air supply line. Install 5/16" OD product tubing through the well cap tube fitting labeled "P" (Figure 3). Slide enough tubing through the well cap and attach the end of the tubing to the top of the pump tube fitting labeled "P". **CAUTION:** Do not kink the tubing.

STEP 8. Cut another length of 1/4" OD air exhaust tubing same length as air supply line. Install 1/4" OD air exhaust tubing through the well cap tube fitting labeled "E". Slide enough tubing through the well cap and attach the end of the tubing to the top of the pump tube fitting labeled "E".

STEP 9. Cut a length of safety rope same length as air supply line. Attach the safety rope from inside the well cap to the top of the pump head. The tubing will carry the weight of the pump.

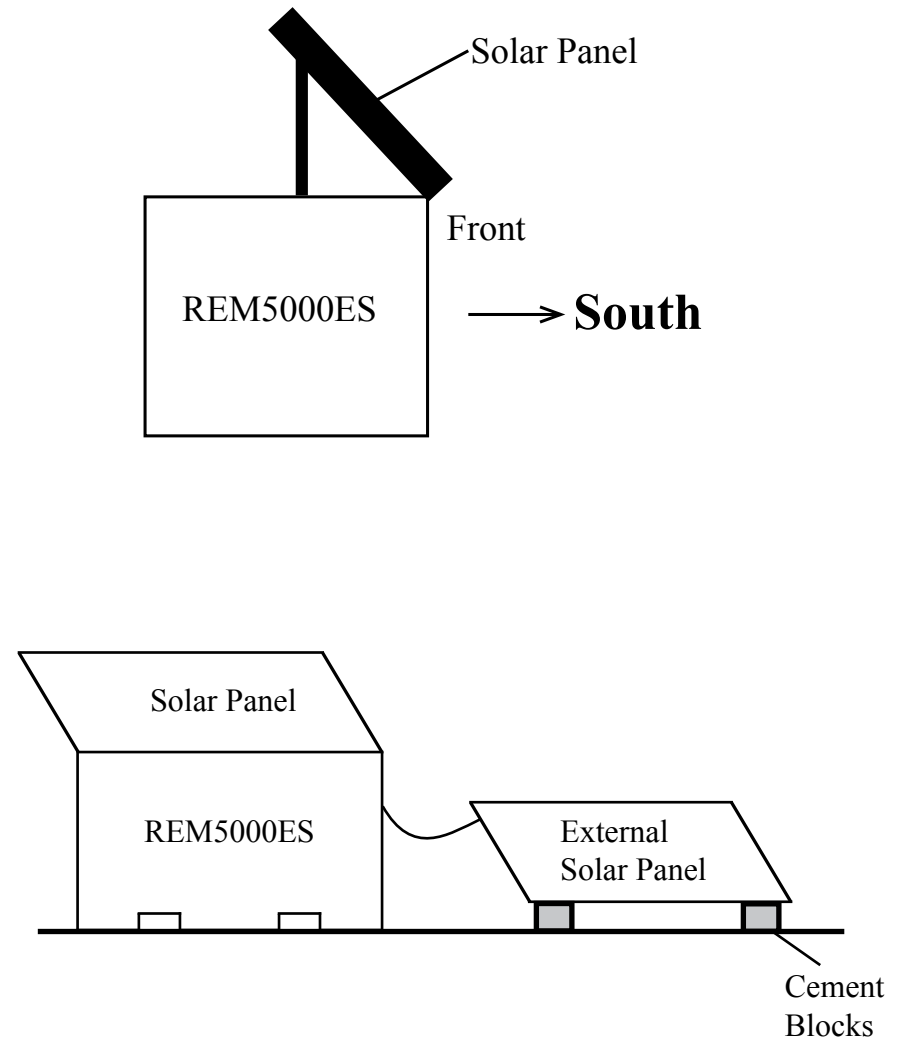


Figure 2

STEP 10. Attach the 3/8"-1/4" filter union onto the 1/4" air supply line coming out of the well cap.

STEP 11. Attach the 5/16" product line coming from the well cap into the inlet of the quick connect union.

STEP 12. Attach the exhaust check valve onto the end of the 1/4" air exhaust line coming out of the well cap.

STEP 13. Manual operation of pump. Go to the Manual Control Window within the DIRECT MODE program (refer to pages 8 -13 for instructions). Turn on station #1. Observe that the pump is making a pumping noise. The exhaust check valve should have an intermittent pulsing sound about once every second. NOTE: There is a 4 second delay from the time the compressor starts to the time air will flow out of the box. This causes the pressure gauge to read high pressure for a moment.

STEP 14. While the pump is running at the desired operating air pressure above ground, confirm or adjust pump pulse rate. To adjust pump pulse rate, remove small plug at the top of the pump head and insert a small flat-head screwdriver into the air logic valve located inside the pump head. Turn clockwise to decrease pulse rate. NOTE: Factory sets pump pulse rate to 60 pulses per minute. Maximum recommended pulse rate is 100 pulses per minute. Lower pulse rates will consume less air.

STEP 15. You are now ready to install pump in the well.

Perform STEPS 13 & 14 for each additional pump.

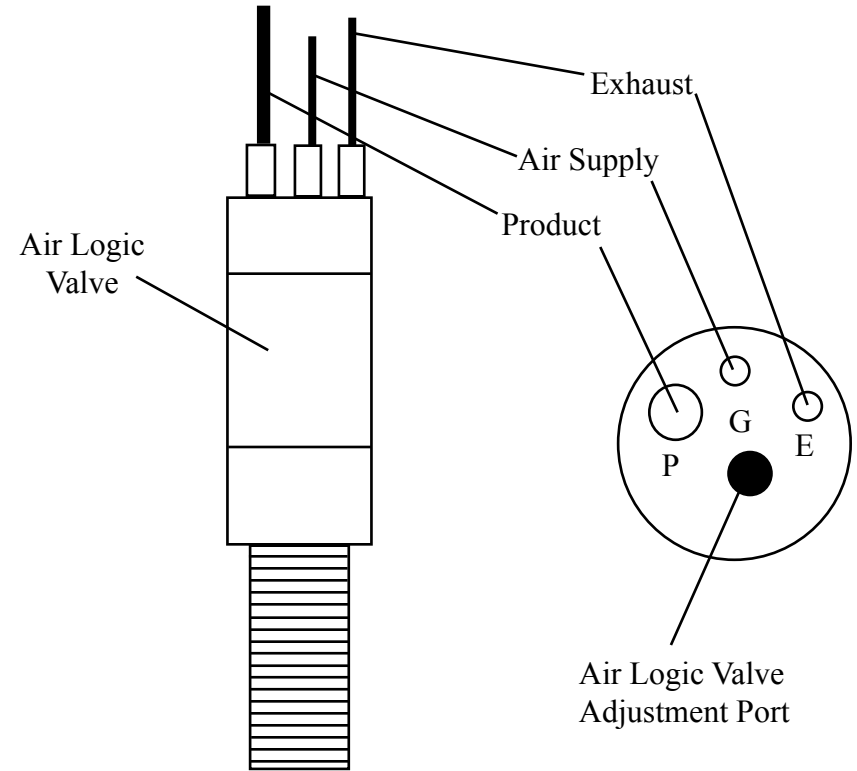


Figure 3

5000ES Controller

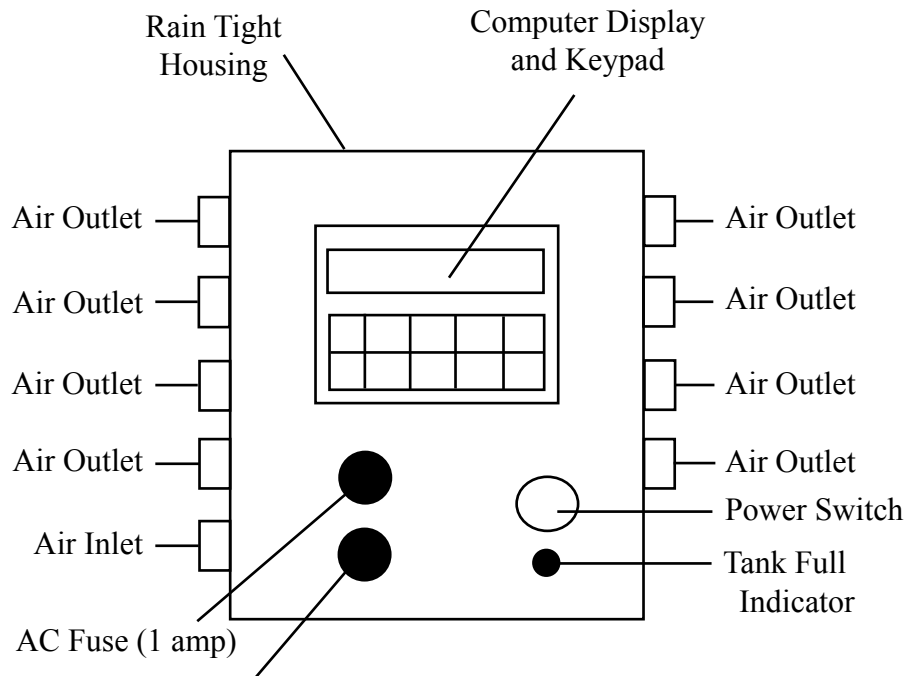


Figure 4

Explanation of the 5000ES Software Windows

SET UP MODE: This is where you set the actual time and date for the computer.

DIRECT MODE: This is where you program each of the 8 outlet stations.

STATUS WINDOW: This is the first window in the Direct Mode. Here you can observe the state of each of the 8 outlet stations and the elapsed run of each outlet station. This window is also where you can reset the elapsed time of any station.

PROGRAM WINDOW #1: This is the second window in the Direct Mode. This is where you program each station's START DATE, START TIME, and DURATION or pump run time.

PROGRAM WINDOW #2: This is the third window in the Direct Mode. This is where you program each station's CYCLES per day, PERIODS or days delay between run times, and LEVEL SENSOR test mode. **CAUTION:** When the Level Sensor is OFF the 5000ES will NOT look for a High Product Tank signal.

MANUAL CONTROL WINDOW: This is the fourth window in the Direct Mode. This window is used to temporarily override any of the 8 stations present states. The "P" means that the manual control will be overridden by the program. The "M" means manual control only. OFF means that this station is not running. ON means this station will stay running until you leave this window.

Operation of the Product Recovery System

Determine how long it takes for each pump to remove all product from the well by using the Manual Control Mode Window. If your pump is less than 30 feet deep, product should show up above ground in about 2 minutes.

Record the amount of time it takes to empty the well of product. When the well is empty of product, turn off the pump.

If you found it took 10 minutes to pump the product off, set the “pumping time” to 5 minutes (Xitech’s 1/2 Rule).

You now have to guess how many times a day to empty the well. A good guess would be once a day for slow recovering product and 3-6 times a day for fast recovering product. For ease of system observation we suggest that you run only one well at a time and that you have the nearest well run first, the next nearest well run next and so on.

PLEASE CALL XITECH FROM THE FIELD IF YOU HAVE ANY TROUBLE WITH YOUR INSTALLATION.

FINAL NOTE: Keep in mind that you are trying to empty the formation of free product over a long period of time. To do this, you must always try to keep some free product thickness in your recovery well at all time while removing free product daily.

To Set Up The Program

STEP 1. Press the “DEL” key to reset the computer. You will end up at the “SET UP MODE” window.

STEP 2. Press the MENU KEY one time to move to the “SET TIME” window.
Press the right or left arrow keys to move from field to field.
Press the up or down arrow keys to change the values.

STEP 3. Press the menu key to move to the “DATE” window.
Press the right or left arrow keys to move from field to field.
Press the up or down arrow keys to change the values.

STEP 4. Press the “DEL” key one time.

STEP 5. Press the UP arrow key one time to get to the “DIRECT MODE”.

STEP 6. Press the MENU key one time to get to the status window.

STEP 7. Clear the elapsed run times for all stations by pressing the “TIME RESET” button at every station. **VERY IMPORTANT!**

STEP 8. Press the MENU key two times to get to the 1st programming window. You should see station #, date, time, and duration in this window.

STEP 9. Enter the start date, start time, and duration (**NOTE:** If you found it took 10 minutes to pump the product off, set the “pumping time” to 5 minutes (Xitech’s 1/2 Rule)) for all stations that have a pump. **SUGGESTION:** Choose start times that do not overlap.

DATE: **MM-DD-YY**
TIME: **HH:MM**
DURATION: **HH:MM**

STEP 10. Press the MENU key one time to move to the last programming window. You should be at the “CYCLES/PERIODS” window.

STEP 11. Enter the number of times a day you want each pump to operate. EXAMPLE: If you would like the pump to run every eight hours, you would enter 03 Cycles (three times a day).

If you would like the pump to run every other day. You would move the cursor under the “C” in Cycles, press the “UP” arrow key one time, and enter 02 Periods. You must first set Cycles to 00 before changing to Periods. **NOTE:** A good guess would be once a day for slow recovering product and 3-6 times a day for fast recovering product.

NOTE: Keep in mind that you are always trying to match the recovery rate of product coming into the well from the formation. It is not good practice to operate pumps faster than the formation recovery rate.

NOTE: The “LEVEL” should always be on if you are pumping to a holding tank.

STEP 12. Press the MENU KEY three times to get back to the “STATUS” window.

You should see the word “ACTIVE” for all stations that have a program and the word “INACTIVE” for all stations that do not have a program. If you see the word “INACTIVE” on a station that you created a program for, then you have left something out in the programming. Try again or call Xitech for assistance, toll free at 888-867-9483.

NOTE: You always want to be in the “STATUS” window when you leave the site.

Status Window Conditions:

INACTIVE Station inactive or OFF
 ACTIVE Station has program but not running
 RUNNING Station active, elapsed time started
 HIGH TANK Stations are turned OFF

Computer Data Windows For The SET UP & DIRECT Modes

SET UP MODE:

System Time and Date

1. Mode Selection Window
CONTROL MODE
SETUP
2. Set Current Time Window
SET TIME: **HH:MM:SS**
USE 24 HOUR TIME
3. Set Current Date Window
SET DATE: **MM-DD-YY**

DIRECT MODE:

Stations Set Up, Level Sensor, and Manual Control

1. Mode Selection Window
CONTROL MODE
DIRECT
2. Station Status Window
STATION 1 INACTIVE
TOTAL TIME = **0000:00**
3. Station Set Up Window
1 START MM-DD-YY HH:MM
DURATION HH:MM
4. Station Cycles & Level Sensor Window
1 CYCLES 00 (00-99)
LEVEL SENSOR ON
5. Station Manual Control Window
1 STATION P OFF

Key Pad Descriptions

MENU: This Key changes windows.

The left & right Keys move the cursor to the next programmable field.

▲: This Key increases the value in the field the cursor is on.

▼: This Key decreases the value in the field the cursor is on.

TIME RESET: This Key will reset the elapsed run time of a station when you are in the STATUS WINDOW.

REV: This Key is to show you what software version is currently being used by your computer.

DEL: This Key will replace all programmed values with preset default values. This Key will NOT delete the elapsed run time in the STATUS WINDOW.

Notes